

# Instruction Manual



V3.1

## Foreword

This sport camera is a High-end HD camera product which could meet the customer's needs , with powerful function for take HD videos, photos, Slow motion, voice recording, video display, and changeable battery , it's the best choice for outdoor sports photography, home security monitoring, waterproof photography, you can record your life whenever and wherever you want.

 
## Operation notes

- 1.This product is a high-precision product, please do not drop or hit it
- 2.Do not put the camera close to objects with strong magnetism, such as magnets and motors. Also, avoid placing the product near objects that emit strong radio waves. Strong magnetic fields may cause product failure or damage images and sound.
- 3.Please select a brand of Micro SD card. Ordinary cards cannot be guaranteed for normal use.
- 4,Do not store the Micro SD card in or near a strong magnetic place to avoid losing the data stored in the Micro SD card.
- 5.During the charging process, if there is overheating, smoke or odor, please immediately pull out the power and stop charging to avoid fire.
- 6.When charging, please keep the product out of the reach of children. The power cord may cause children to accidentally suffocate or get an electric shock.
- 7.Please place the product in a cool, dry and dust-free place.

## Product Features

- >The waterproof shell with waterproof function is convenient for you to shoot wonderful water sports, the waterproof shell can be deeply waterproof
- >Video resolution up to 5K@30fps
- >Wide-angle HD lens
- >Ultra high-definition 2.0-inch IPS screen
- >Removable battery, easy to replace the battery, extend the service life
- >Support up to 256G memory card
- >Various video recording formats: 5K,4K, 2,7K, 1080P, 720P
- >Various shooting modes: normal, timer, automatic, continuous shooting
- > Multiple recording modes: normal, loop, time-lapse, slow motion

## Product diagram

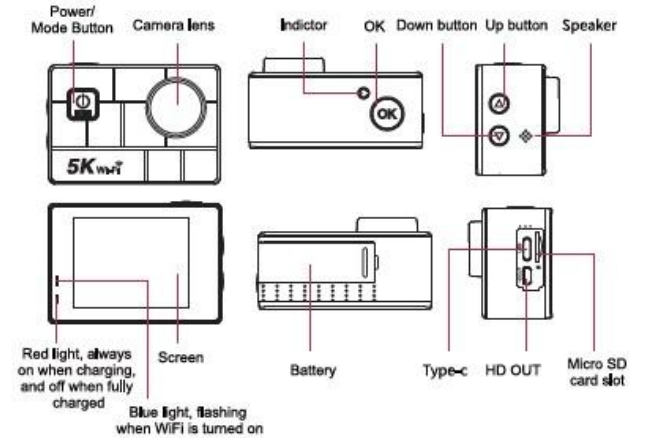

## Button function definition

### >Power/Mode Button

1. Press and hold the "power/mode Button" for about 2-3 seconds to turn on/off
2. After power on, short press this button to enter the shooting/pictures mode selection interface, Press Up/Down button to choose the mode that you want. Press OK button to confirm. In video/pictures mode, short press Mode button twice enter into the playback interface.

### >OK button

1. In recording mode, short press to start recording, short press again to stop recording
2. Short press to take a photo in the photo mode
3. In the file playback mode, short press to play the video, long press to delete the current file
4. Short press to confirm option in the setting menu
5. In the photo or video mode, long press the OK button to open the setting menu corresponding to the current shooting mode.

### Up button

1. In video/photo mode, short press the UP button to adjust the digital zoom. It can reach to 5X.
2. In the setting mode, short press this button to select the setting item in the menu
3. In photo/video mode, Long press this button to open the wifi function, short press again can close wifi function

### > Down button

In the setting mode, short press this button to select the setting item in the Menu

### > Type C interface

1. Function: data transmission, charging, external microphone
2. How to use:

- A. Use the USB cable to connect to the computer, which can achieve three functions: U disk mode (read the content of memory cards), USB camera (acting as a pc camera), charging mode (charging the camera), select the corresponding mode to achieve the corresponding function.
- B. It can be charged to the camera via 5V power adapter or power bank
- C. It can be compatible with external microphone (external microphone is not standard).

### > Micro SD card slot

Support 16-256G capacity Micro SD card. (Note: High-speed card with C10 or above standard should be selected. Please format it with this machine before using it)

### >Indicator light

Work indicator: blue light  
Charging indicator: red light  
WIFI indicator: yellow light

## Product main function introduction

### 1. Camera mode selection

 
After power on, short press the Power button into the camera mode interface, press Down/Up button to select the requirement mode, then press OK button to confirm.



### 2. Setting menu

Long press OK button enter into the menu setting in the video or photo interface.

In the menu setting interface, press Power button to switch between different setting menus or exit. Press Down/Up button to select the specific items to be set, and press the OK button to confirm

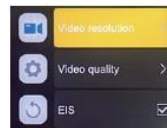

Press the power button on the menu interface to switch between different setting menus: current mode setting menu → camera system setting menu → exit.

### 3. Video, photo function

1. Current mode icon
2. Storage
3. Audio
4. Battery capacity
5. Playback
6. Resolution
7. Setting



### 4. WIFI and APP function

#### APP download

For Android, please search " Supcam Pro" in the Google APP store to download and install. IOS system search " Supcam Pro" in the Apple App Store to download and install. Or scan the QR code below to download the APP.



APP download

#### Wifi Information

In the video mode or photo mode, long press the "UP button" to turn on the WIFI, the camera enters the WIFI interface, display the WIFI name "Sport-cameras\_XXXX" WIFI password "1234567890 ". Find the corresponding WIFI name of the camera in the WIFI settings of the phone to connect to the WIFI.

 
### APP operation

When you open the WIFI on camera, two method to connect the APP as below,  
1. Turn on WIFI function on your phone, enter into Supcam Pro" APP, click "Scan connection" to scan the QR code of the WIFI interface of the camera and enter the APP interface.

2. Turn on WIFI function on your phone, enter into Supcam Pro" APP, Click "Connect manual connection" to find the corresponding WIFI name and enter the password. after successful connection, back to last interface, then click " enterprise view" to enter the APP.




### APP operation interface function introduction

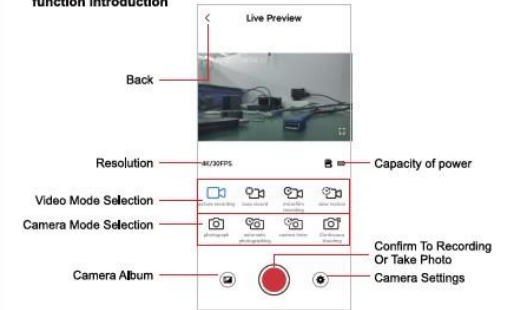


### APP operation

 When you open the WiFi on camera, two method to connect the APP as below,  
 1. Turn on WiFi function on your phone, enter into Supcam Pro" APP, click "Scan connection" to scan the QR code of the WiFi interface of the camera and enter the APP interface.  
 2. Turn on WiFi function on your phone, enter into Supcam Pro" APP, Click "Connect manual connection" to find the corresponding WiFi name and enter the password. after successful connection, back to last interface, then click " enterprise view" to enter the APP.

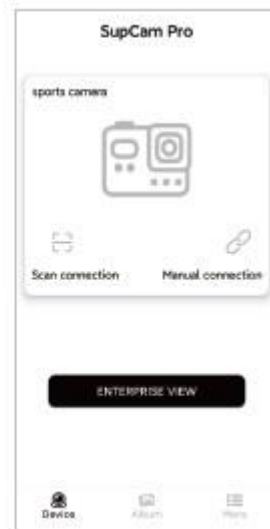

### APP operation interface function introduction

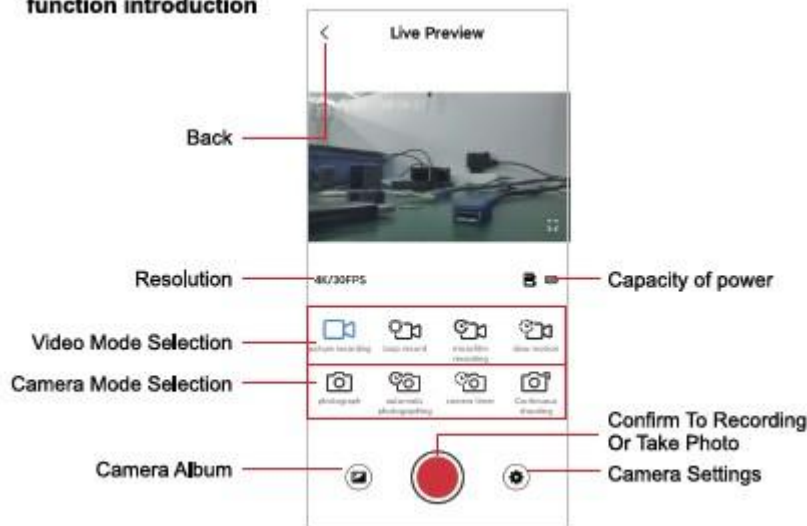 

### Video photo sharing

After downloading pictures and videos from the camera album, they will be automatically saved in the APP "Offline Album". After the phone is connected to the network, open the APP and enter the "Offline Album" to view or share the video photos that have been downloaded to the local. You can also view and share the video photos downloaded to the phone in the phone album .

### 6.Specifications

Image sensor	SONY
Function mode	Recording, photo, playback....
LCD screen	2,0" screen
Picture resolution	50M,30M,24M,20M,12M,8M
Video resolution	5K/30fps, 4K/60/30fps, 2,7K/60/30fps, 1080P/60/30fps, 720P/120/60/30fps
Storage medium	Micro SD Card (Maximum supporting 256GB)
File format	JPG MP4
USB Port	TYPE-C
Power supply	Built- in3.7V rechargeable lithium battery
Menu language	English/ Spanish.....
Power saver	3min/5min/10min/OFF
Operation system requirements	Windows XP/ Vista/7/8,Mac 10.8
Dimensions	60,5*32*43,4mm